




TYPICAL COVE DETAIL FOR TIMBER WALL CONSTRUCTION TO RESIN FLOORING COVE

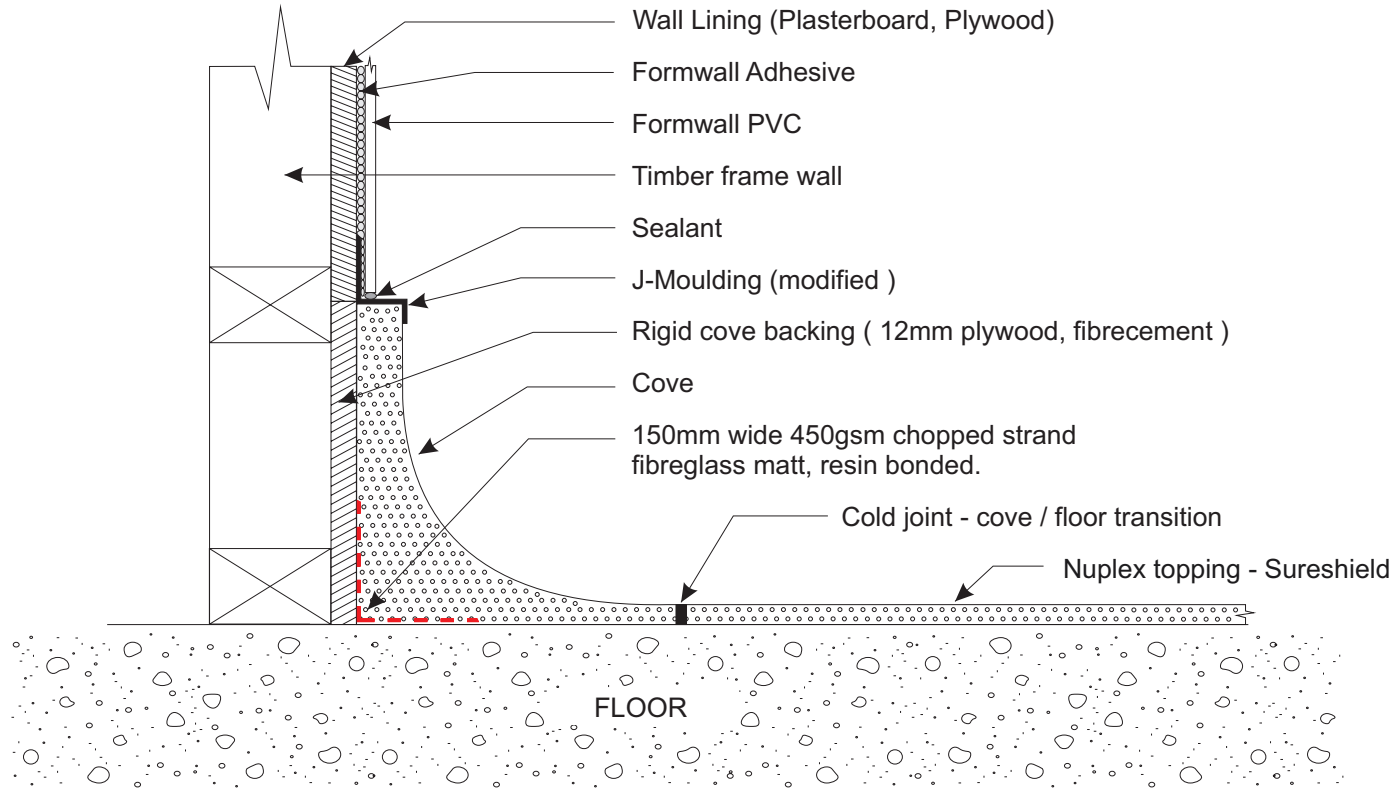


FORMWALL & SURESHIELD RESIN FLOOR TOPPING

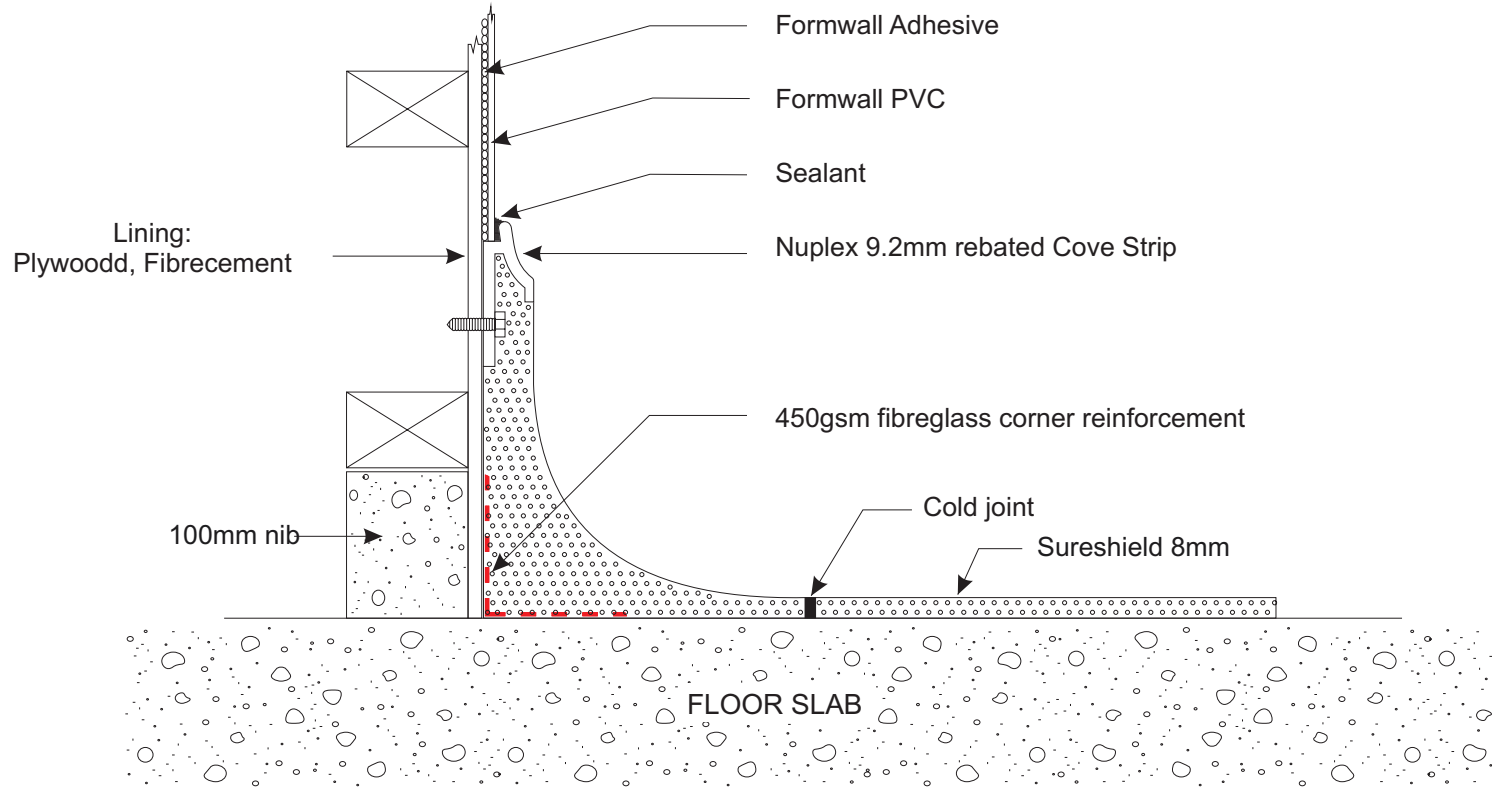


Formwall Wall Lining and Resin Floor Topping and Cove Detail

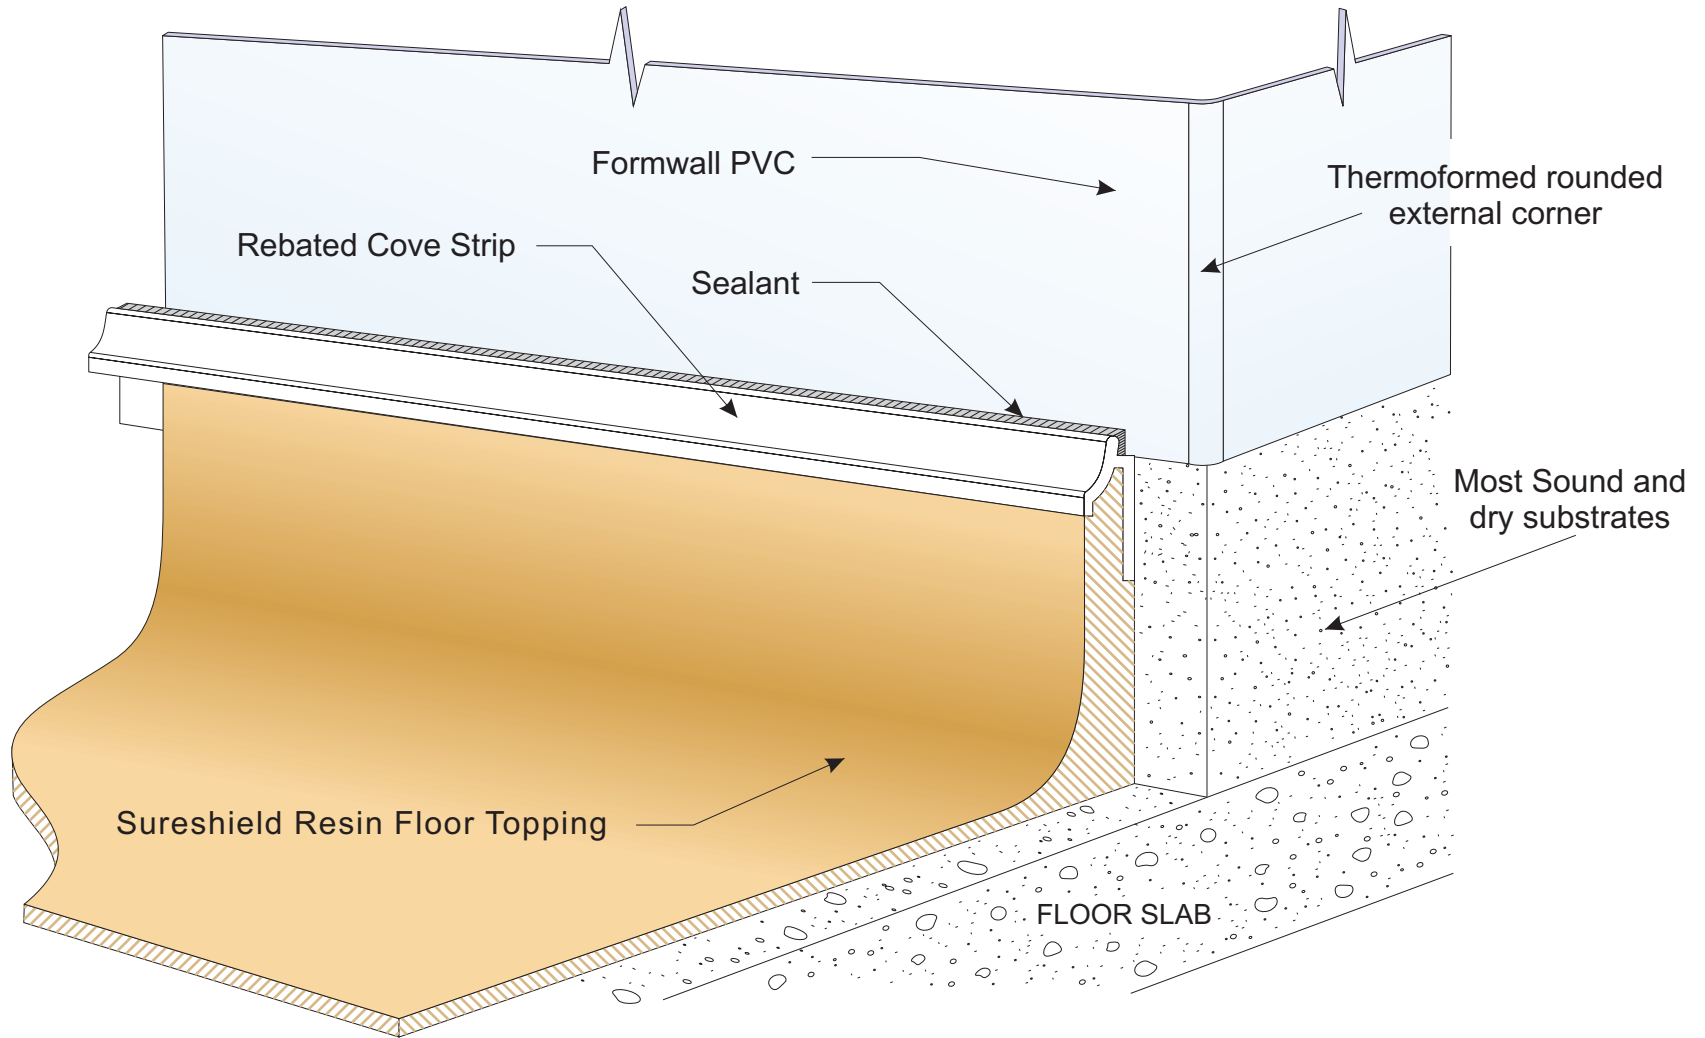


Formwall Wall Lining and Resin Floor Topping and Cove Detail

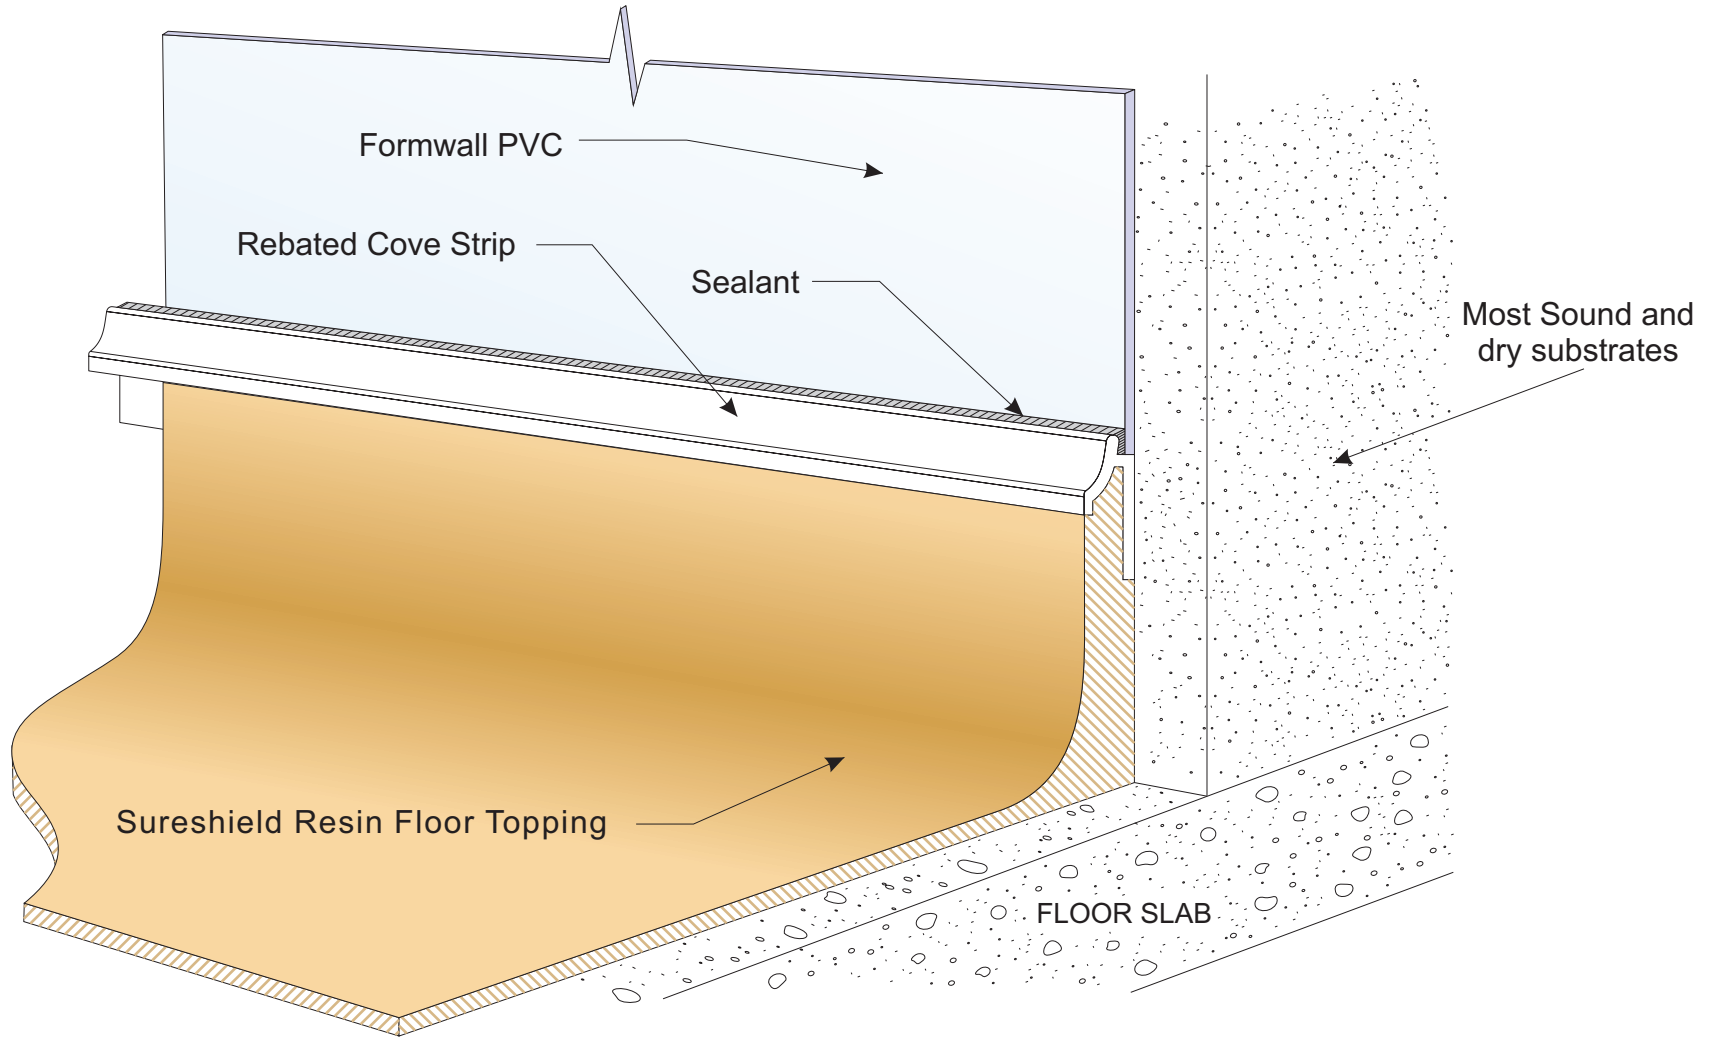


FORMWALL TRANSITION TO VINYL FLOOR

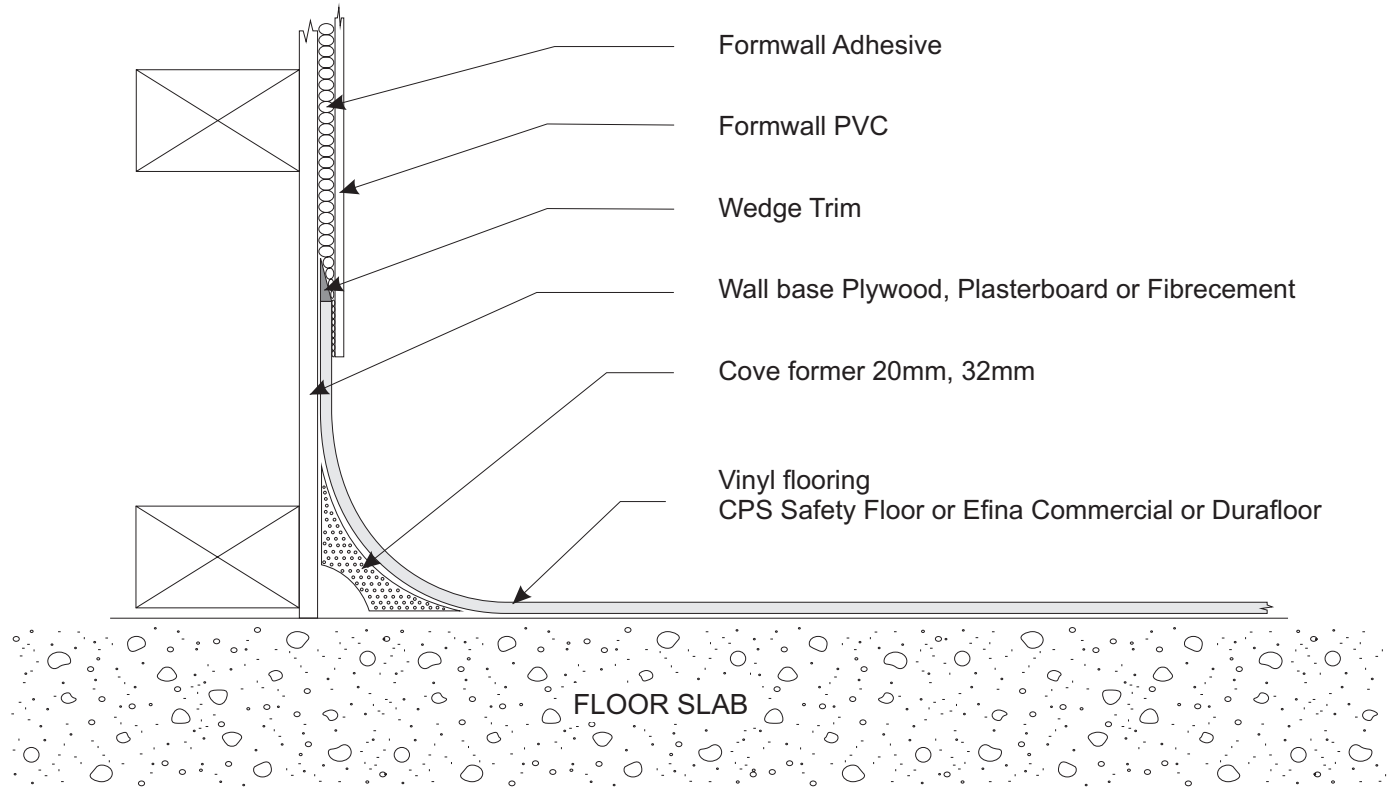


FORMWALL TRANSITION TO VINYL FLOOR VARIATIONS

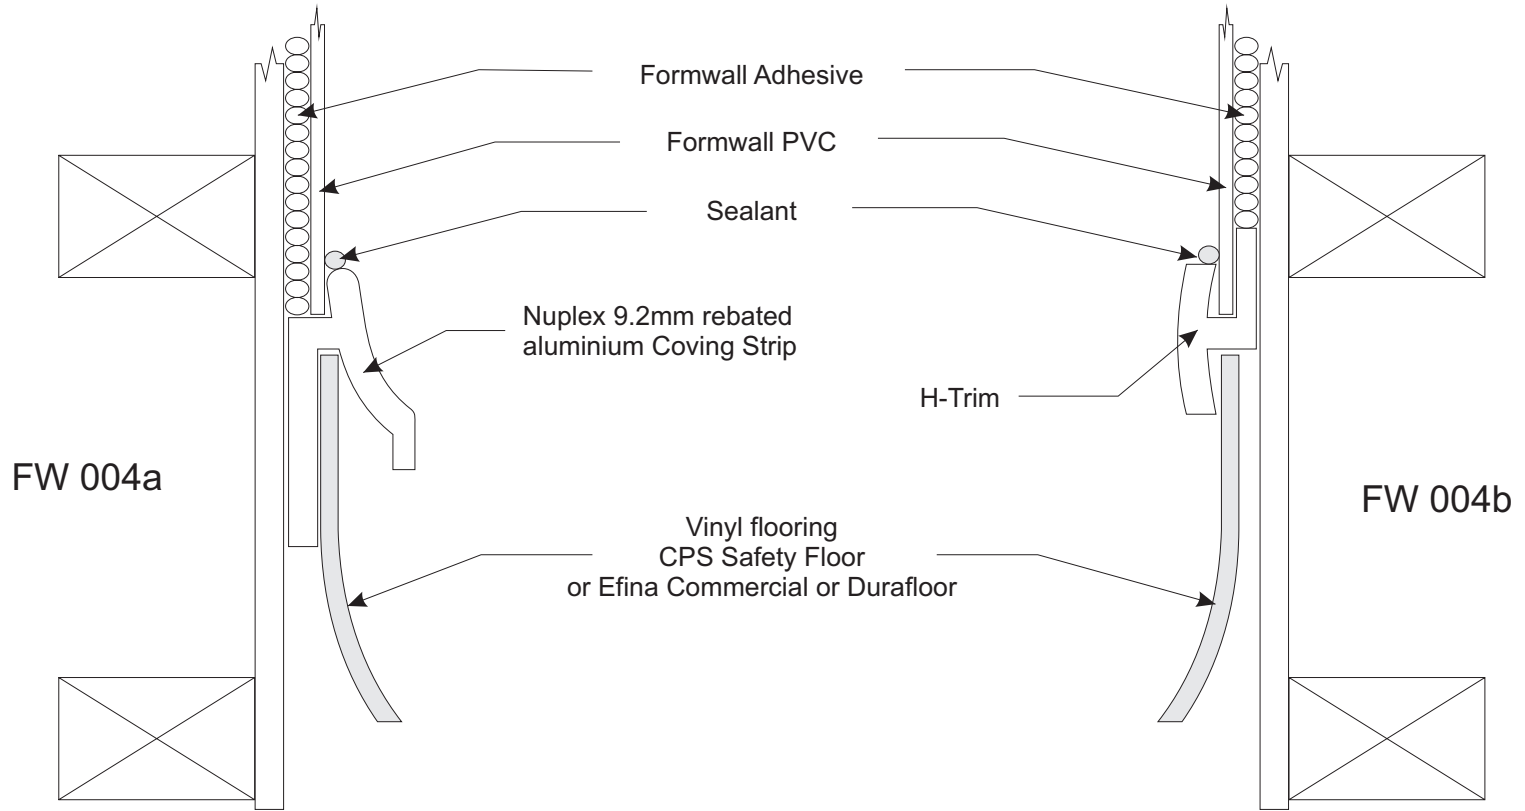


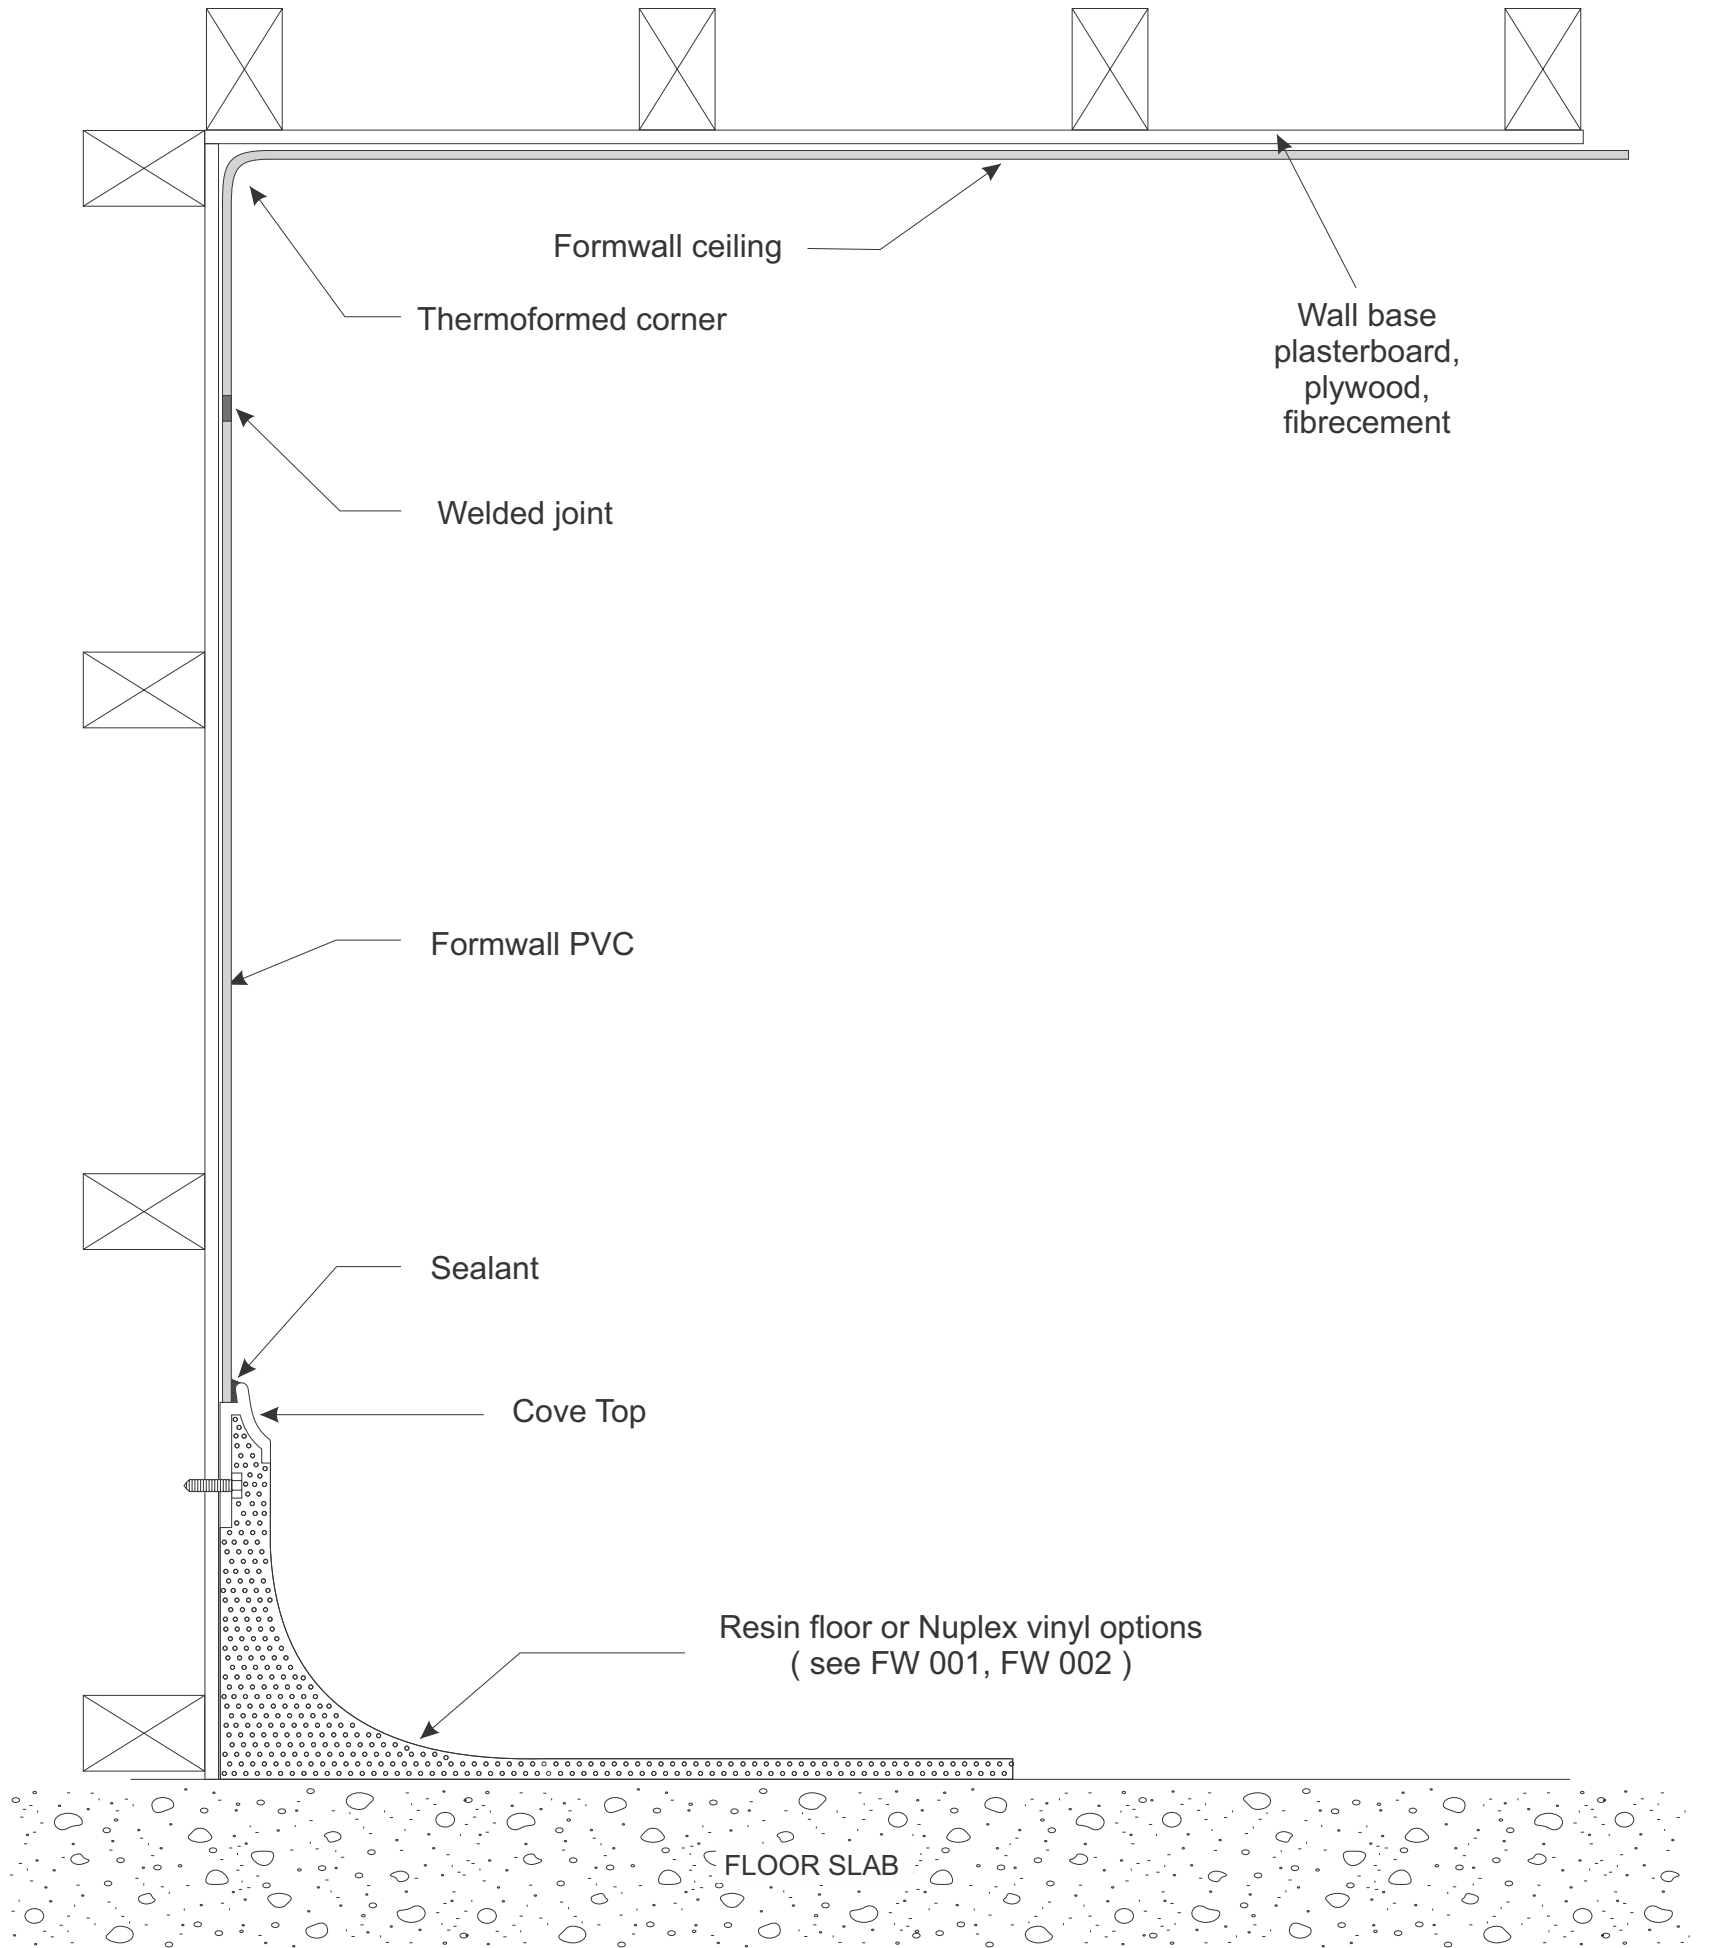

FORMWALL CEILING PANELS

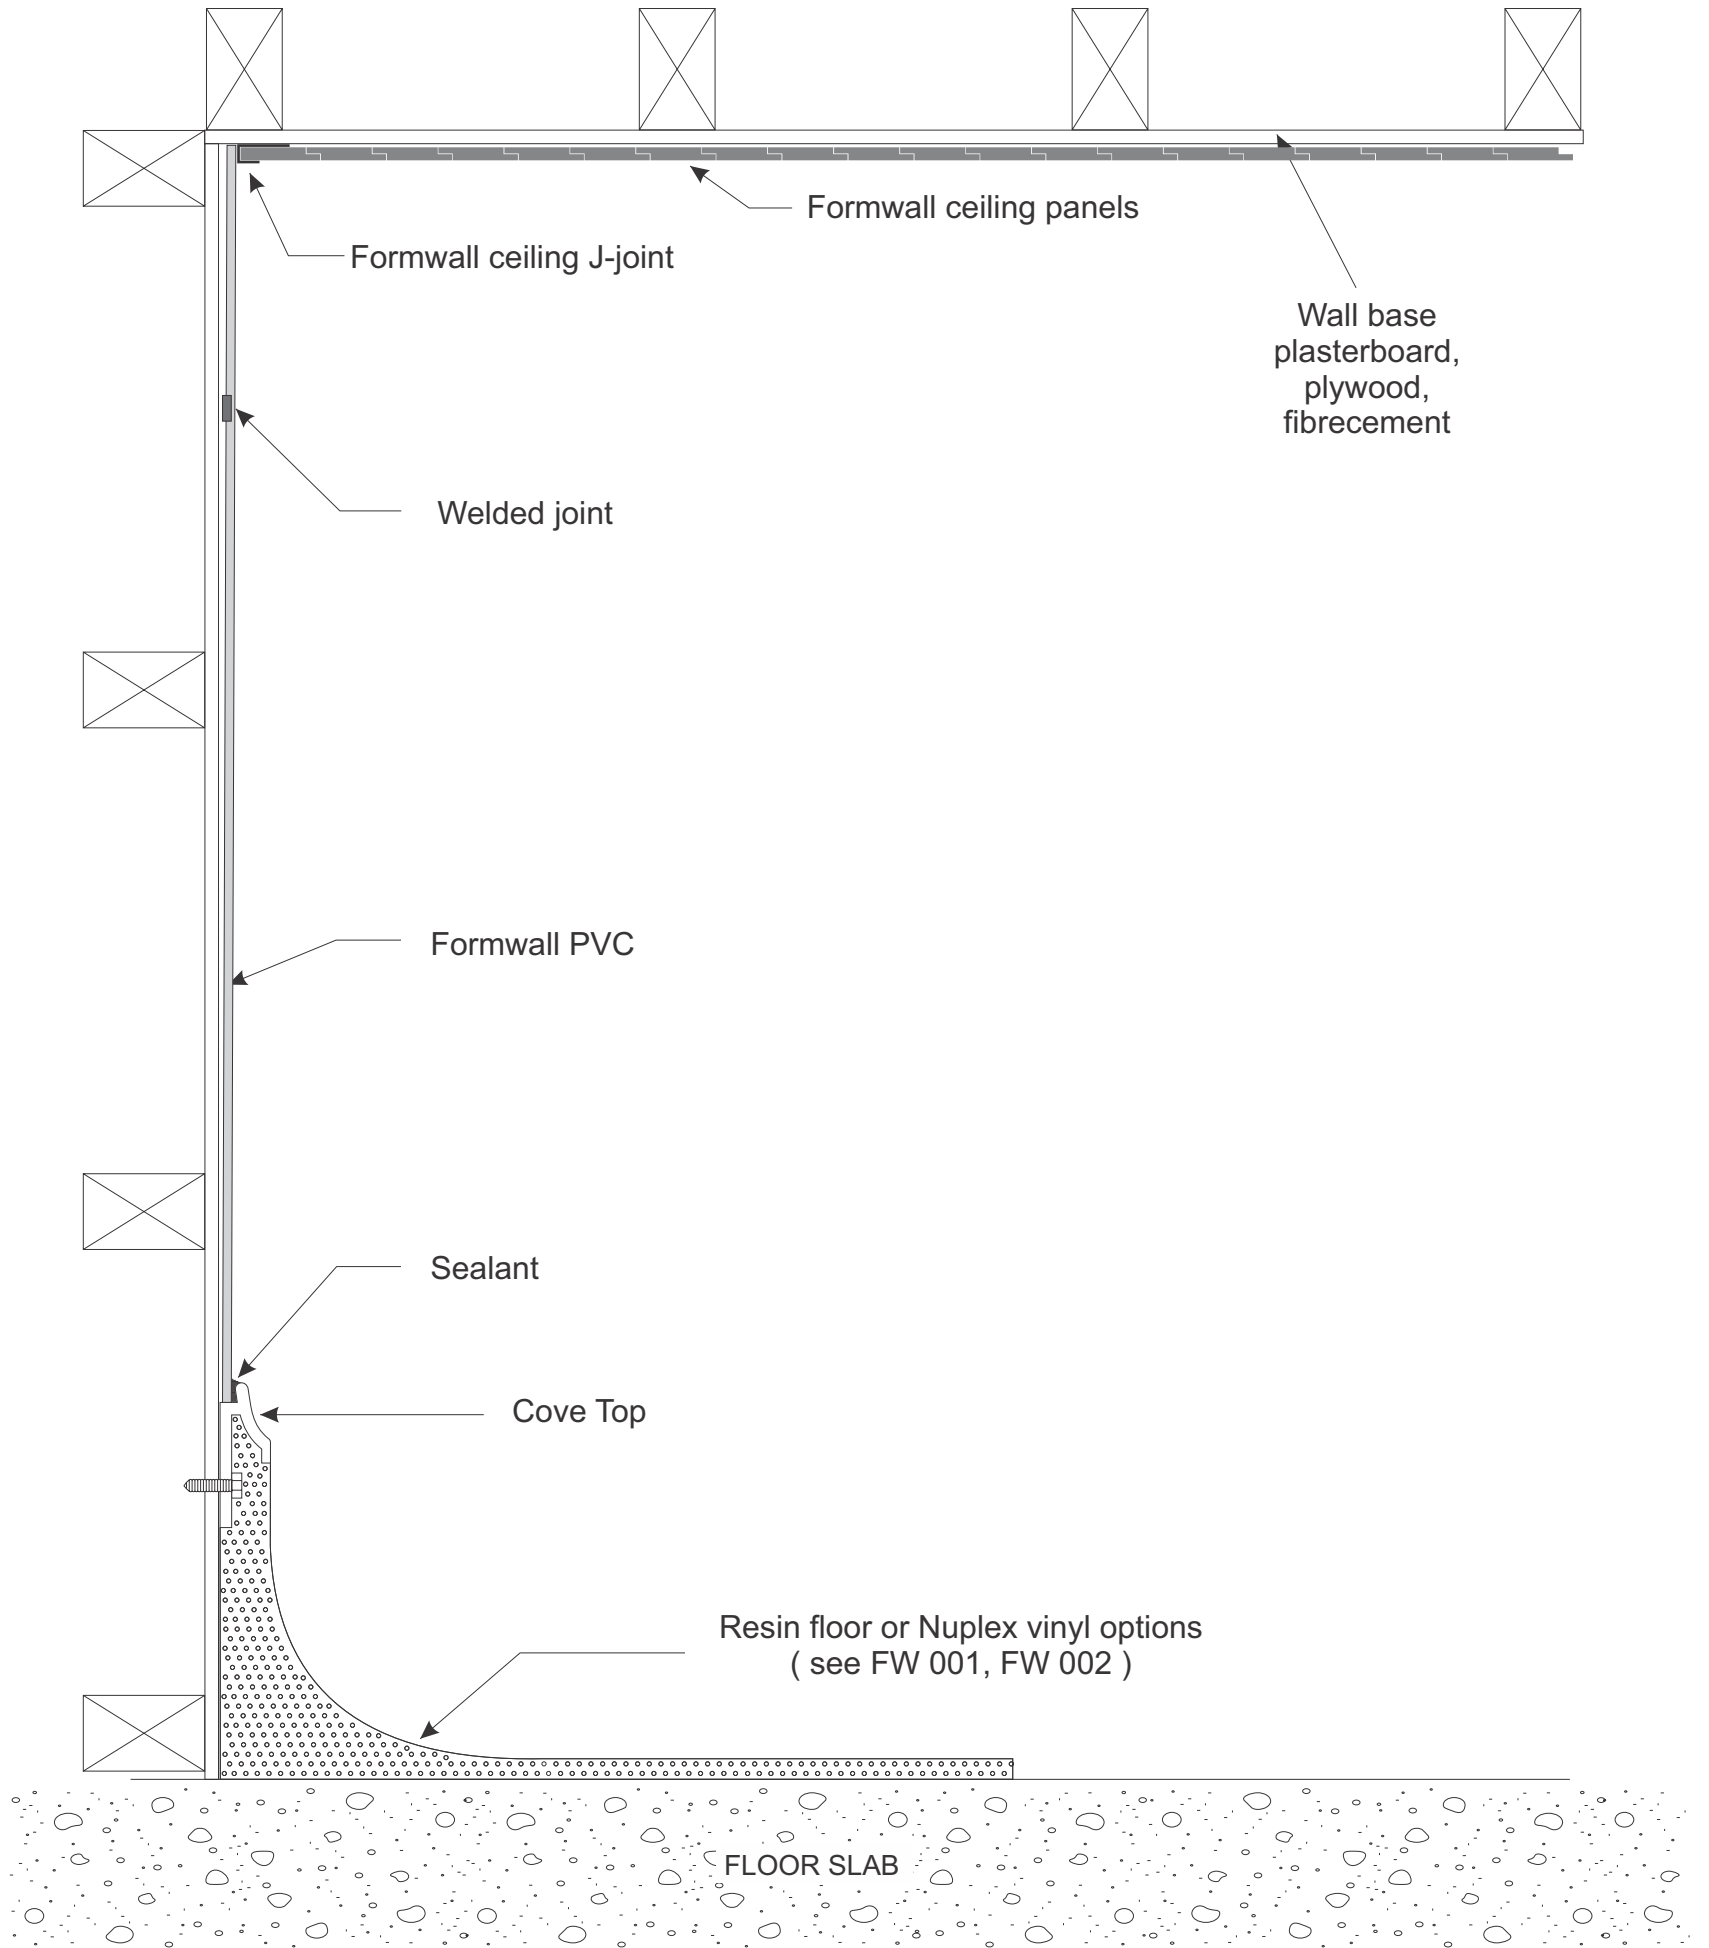


FORMWALL TO VINYL SHEET SAFETY FLOORING COVE SKIRTING DETAIL

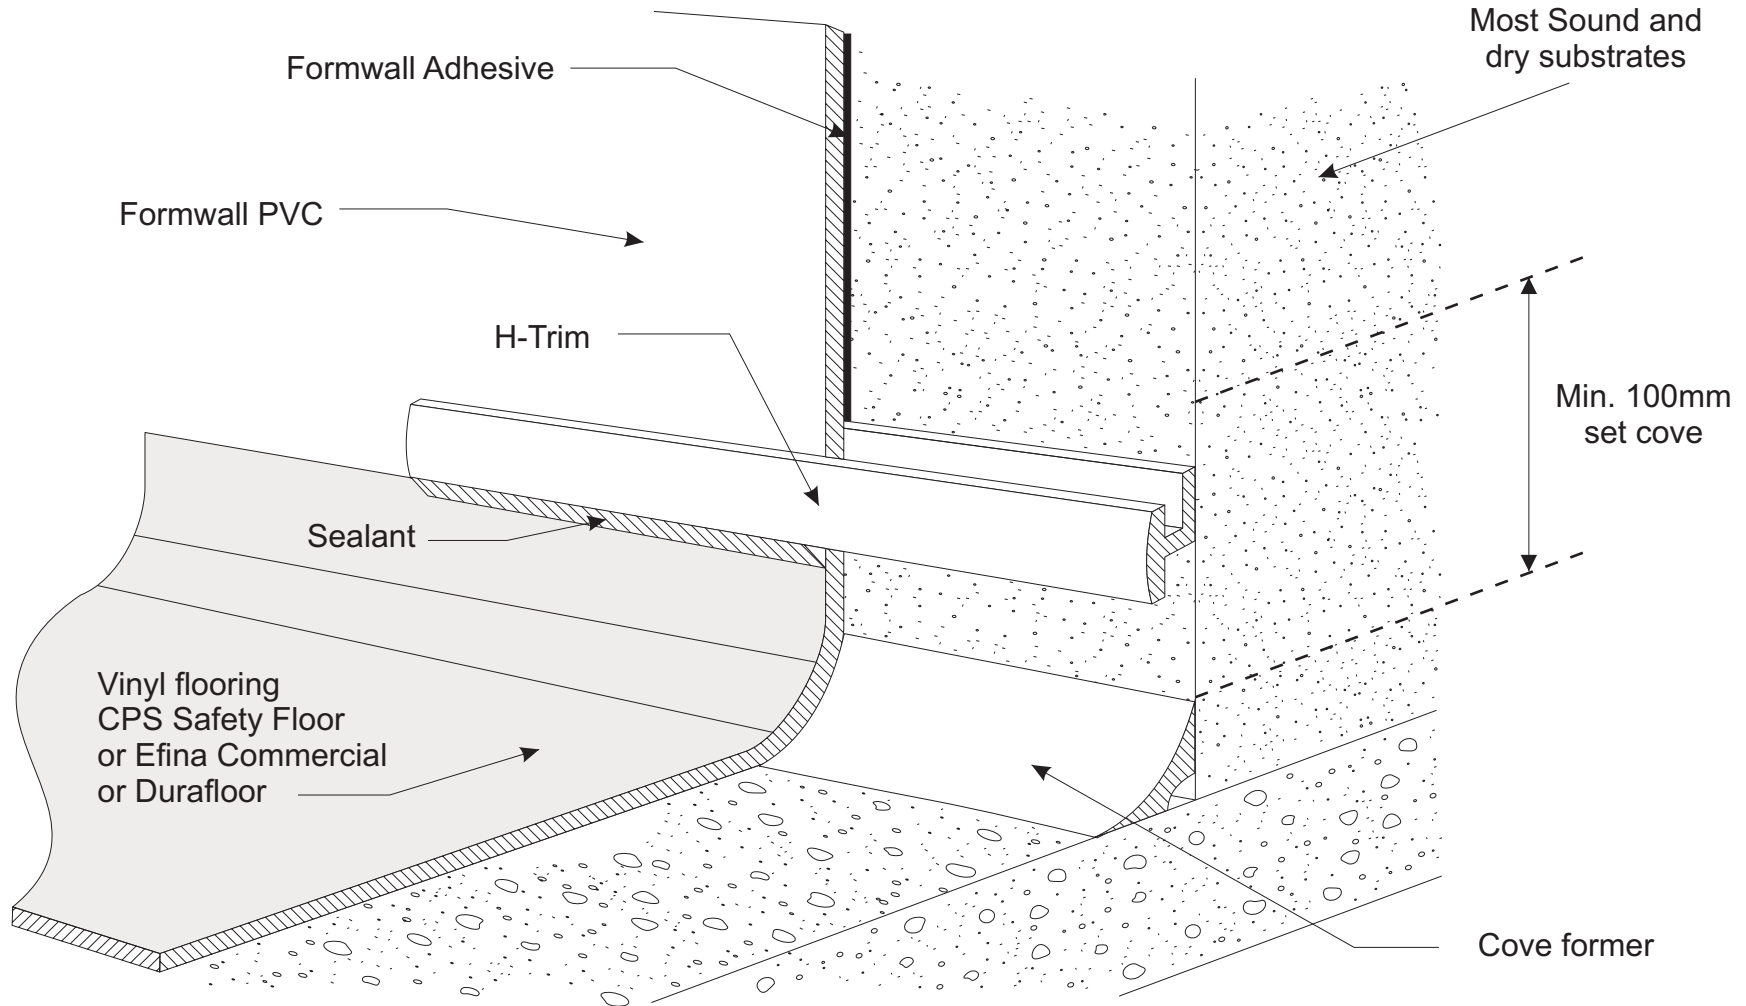

DISABLED USE SHOWER

Forming a Walk-in / Roll-in Shower with Resin Toppings

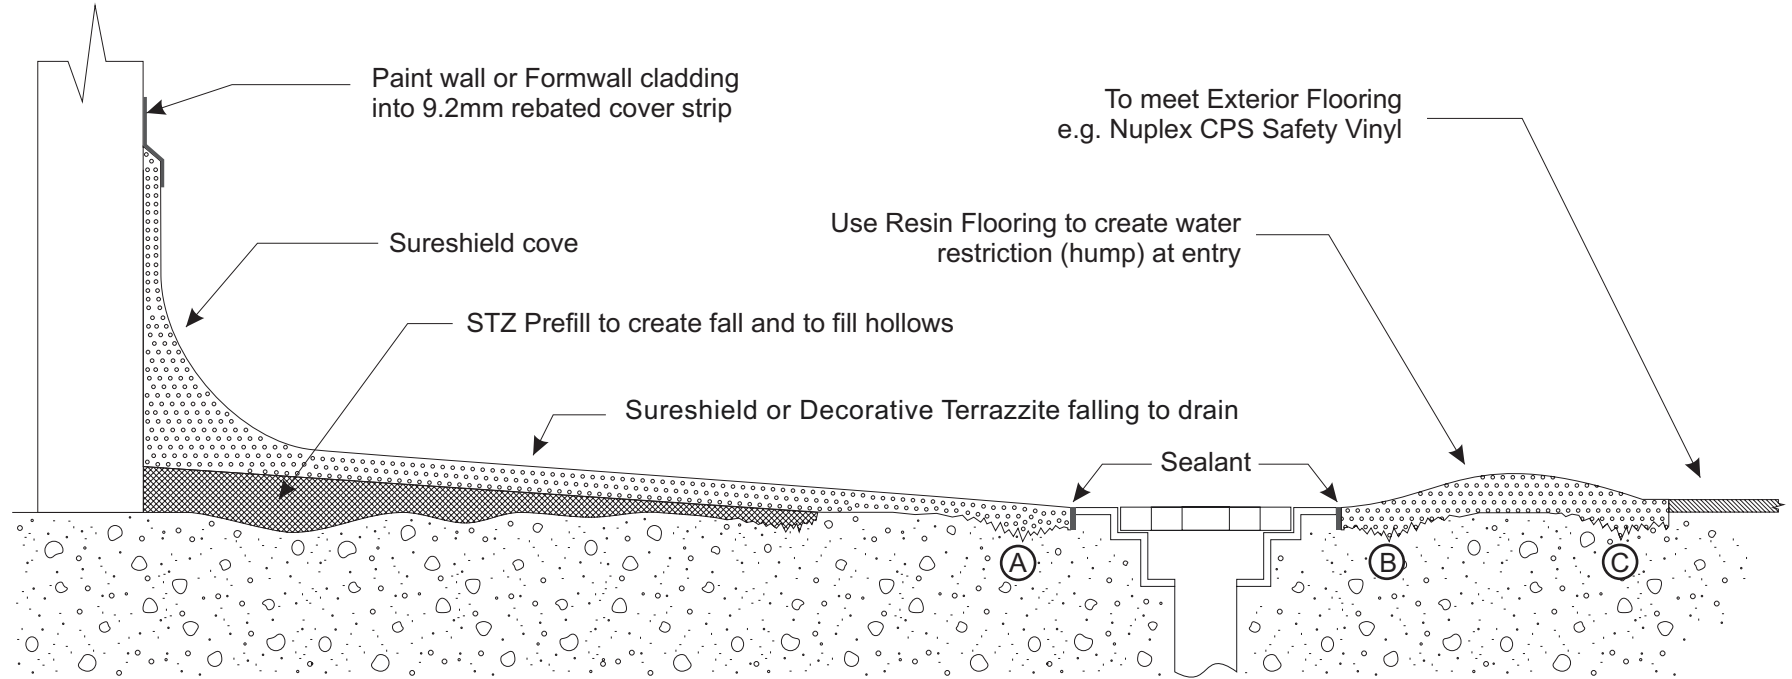


A, B, C, Chase concrete to keep Thickness

NOT TO SCALE

WALK IN SHOWER (DISABLED)

Formwall with Floor Topping (Sureshield, Supascreed, Decorative Terrazzite)

RF 051
05-03-2014

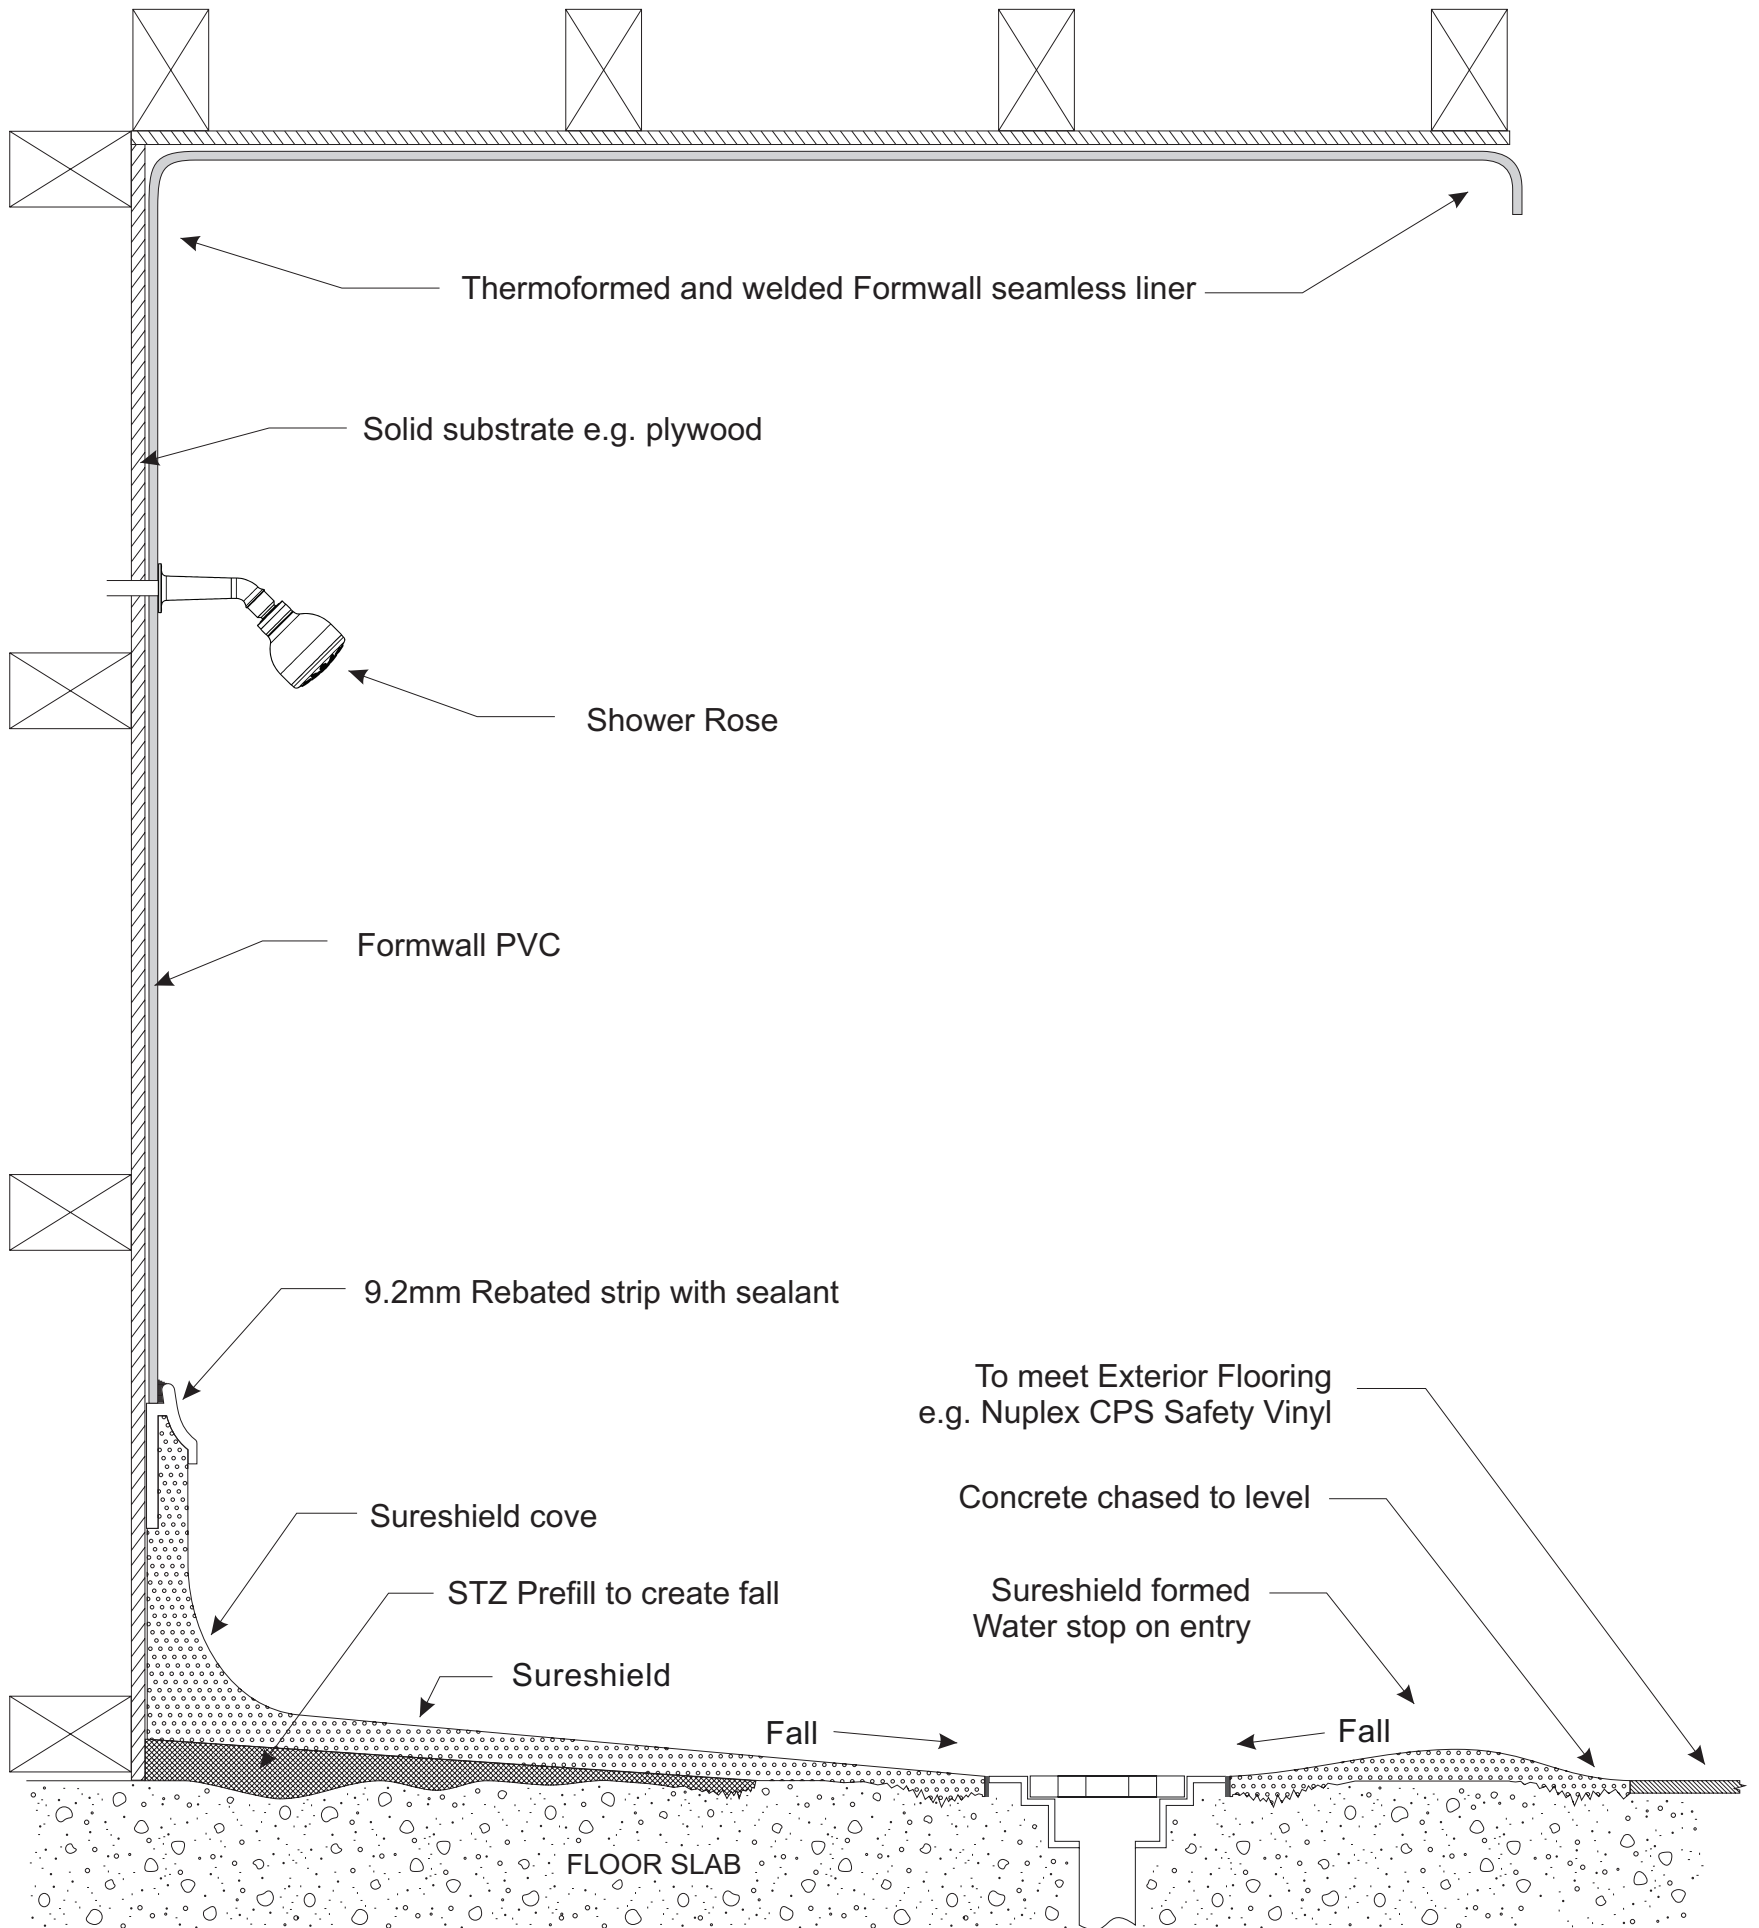

NOT TO SCALE