


DRAWING KEYS

- MEMBRANE FULLY BONDED
- UNBONDED MEMBRANE
- SEPARATION LAYER

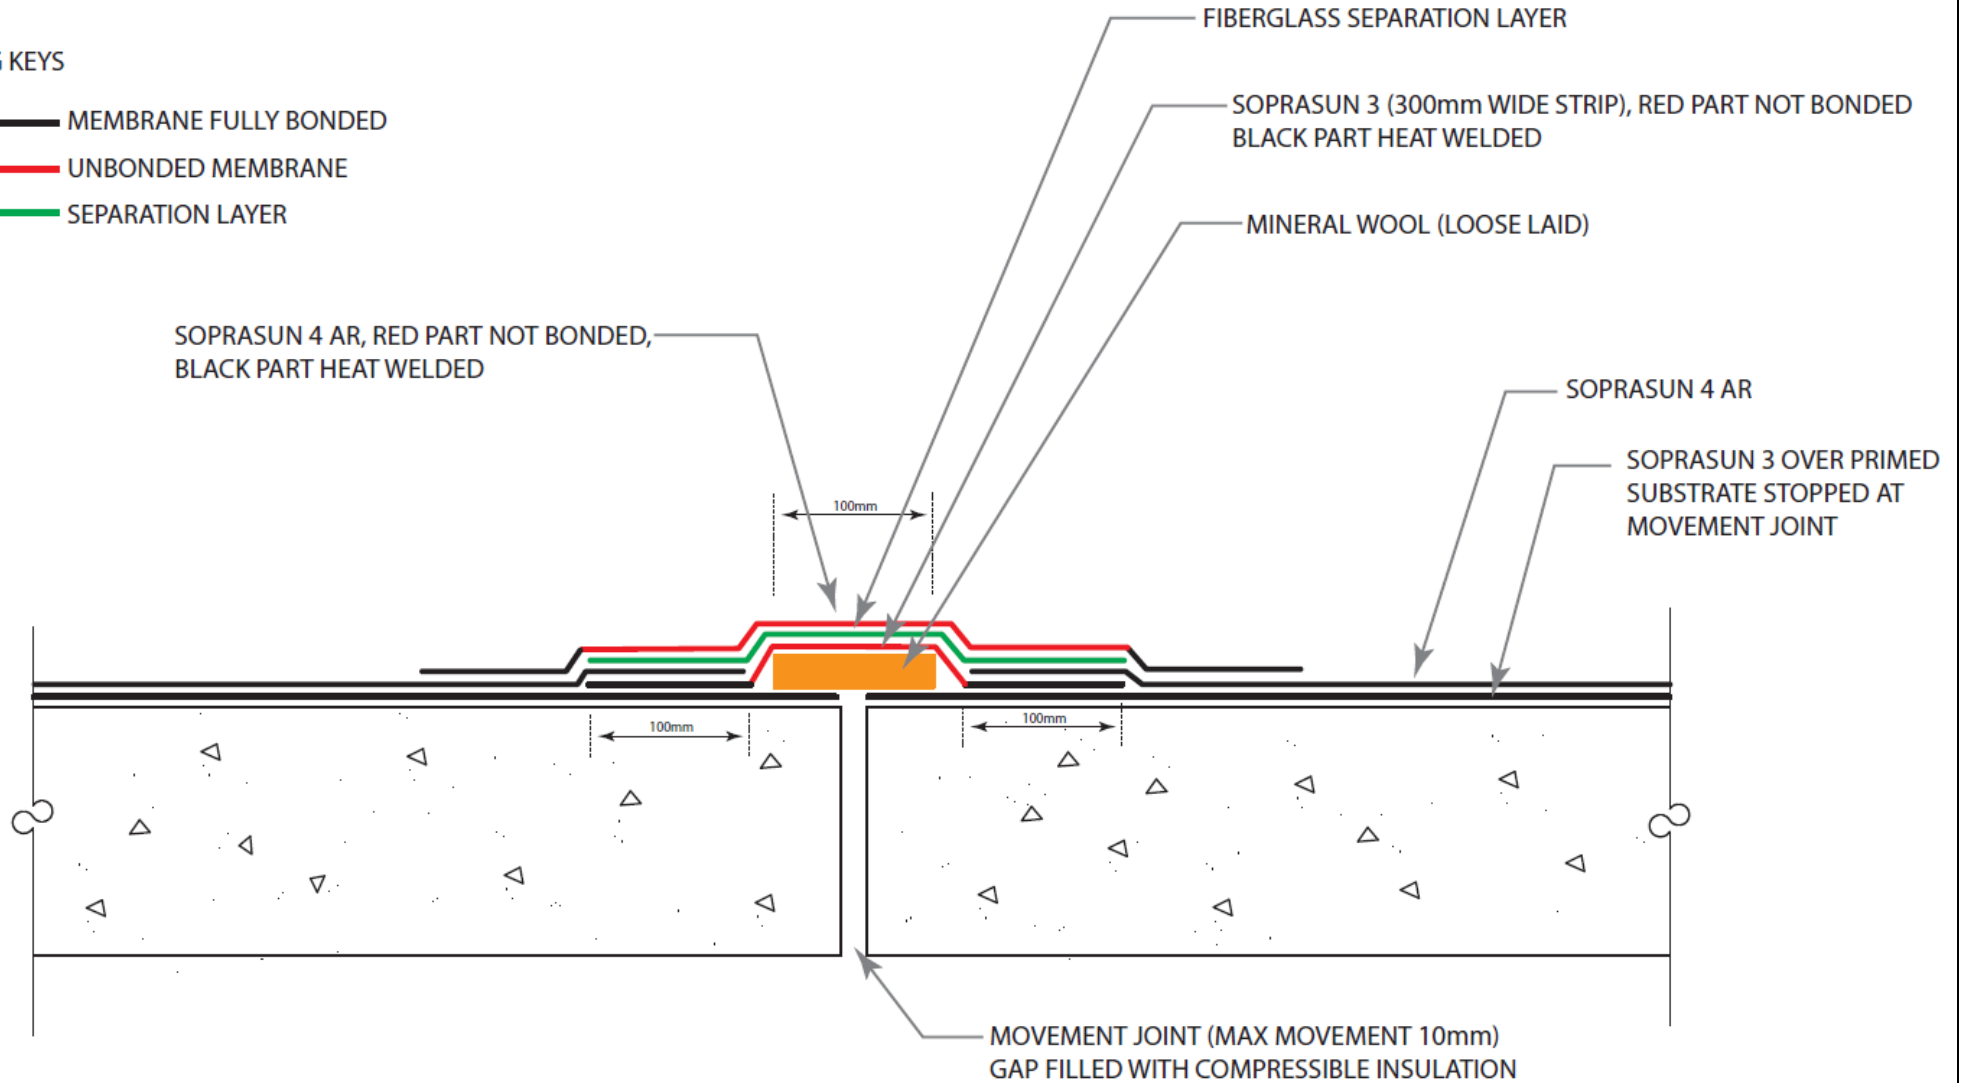

MOVEMENT JOINT DETAIL APP

DRAWING: SOP-023

SCALE: Not to scale

EFFECTIVE DATE: 15-03-2019

Movement Joint Detail APP



Prior to Membrane Installation, Review Data Sheet

Surface Prep

It is the contractor's responsibility to inspect all areas which are to receive the waterproofing membrane and report any unsatisfactory conditions to the main contractor. Refer to the technical data sheet for detailed specifications for preparing various substrates.

The surface to be waterproofed must be clean and sound. Remove all dust, dirt, laitance or any other contaminants which may hinder adhesion of the membrane.

Special Notes

This detail or sketch is based on the verbal and / or graphic information supplied to Allnex/Soprema and is submitted for the sole purpose of making suggestion or recommendations concerning the application of the Soprema membrane. Allnex/Soprema believe the designs of construction, which receive the products, are best left to owners, architects and or contractors.