


APPLICATION of MEMBRANES

The base sheet on inside slope must be installed according to the following diagram:

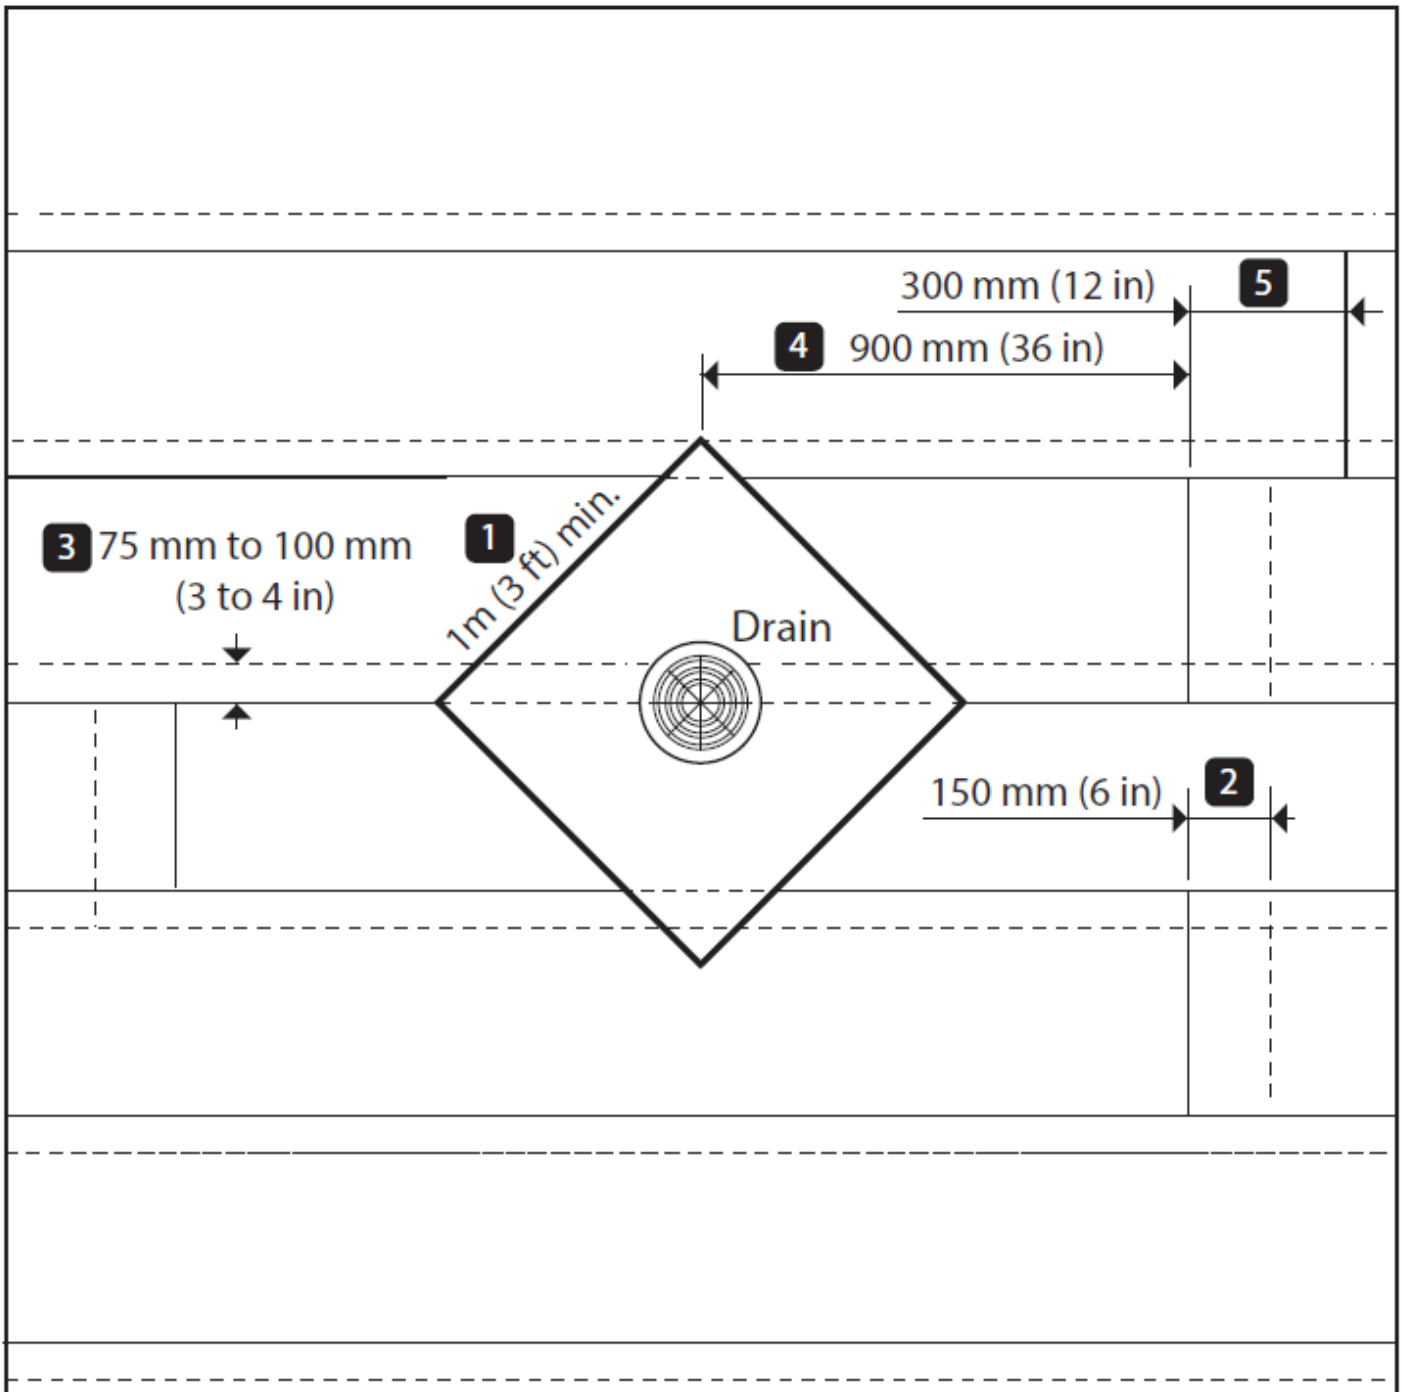

BASE SHEET INSTALLATION DIAGRAM

DRAWING: SOP-018

SCALE: Not to scale

EFFECTIVE DATE: 15-03-2019



Base Sheet Installation

Prior to Membrane Installation, Review the Data Sheet

Surface Prep

It is the contractor's responsibility to inspect all areas which are to receive the waterproofing membrane and report any unsatisfactory conditions to the main contractor. Refer to the technical data sheet for detailed specifications for preparing various substrates.

The surface to be waterproofed must be clean and sound. Remove all dust, dirt, laitance or any other contaminants which may hinder adhesion of the membrane.

Special Notes

1. Reinforcement membrane
2. End lap joints
3. Side lap joints
4. Minimum distance between the center of the drain and end lap joints on base sheet membranes overlapping the drain.
5. Minimum distance between end lap joint and base sheet membranes overlap.