


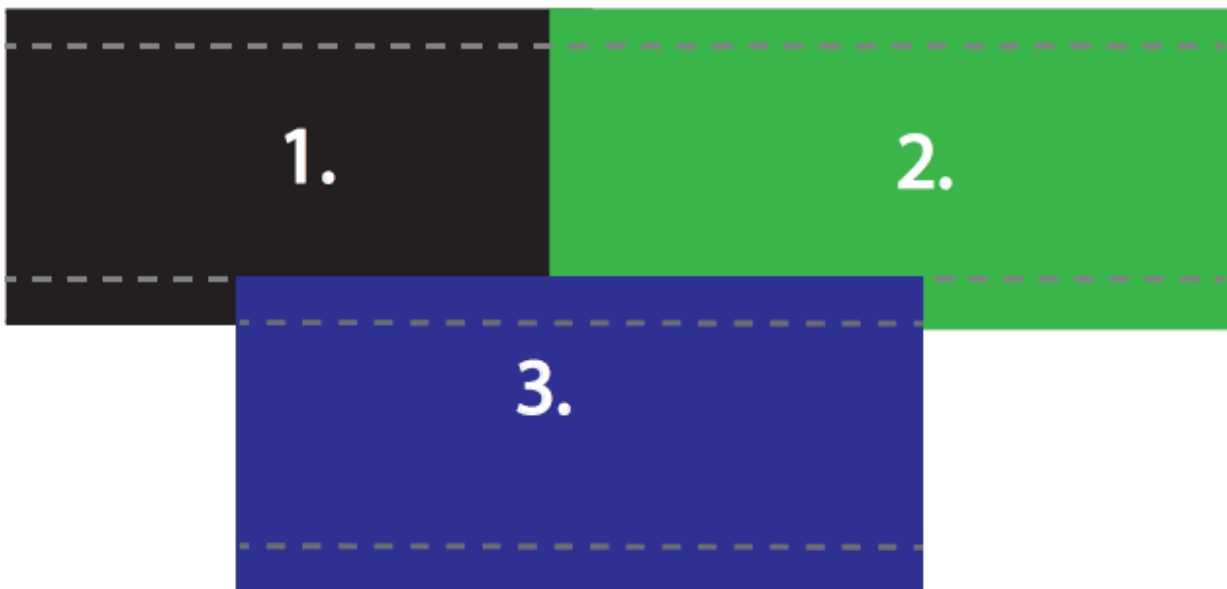

STEP 1



STEP 2



STEP 3



END LAP DETAILING

DRAWING: SOP-016

SCALE: Not to scale

EFFECTIVE DATE: 15-03-2019



End Lap Detailing

Prior to Membrane Installation, Review the Data Sheet

Surface Prep

It is the contractor's responsibility to inspect all areas which are to receive the waterproofing membrane and report any unsatisfactory conditions to the main contractor. Refer to the technical data sheet for detailed specifications for preparing various substrates.

The surface to be waterproofed must be clean and sound. Remove all dust, dirt, laitance or any other contaminants which may hinder adhesion of the membrane.

Special Notes

- a) Cut off the corner piece of the selvage edge at the end lap that will be covered by the next roll.
- b) Make sure you cut off the corner when membrane is unrolled dry before torching in place.
- c) Apply this rule for base and cap sheet membranes.